


Mitone®

MITMG2
Mobile Game Console



User's Guide

1.1: Buttons

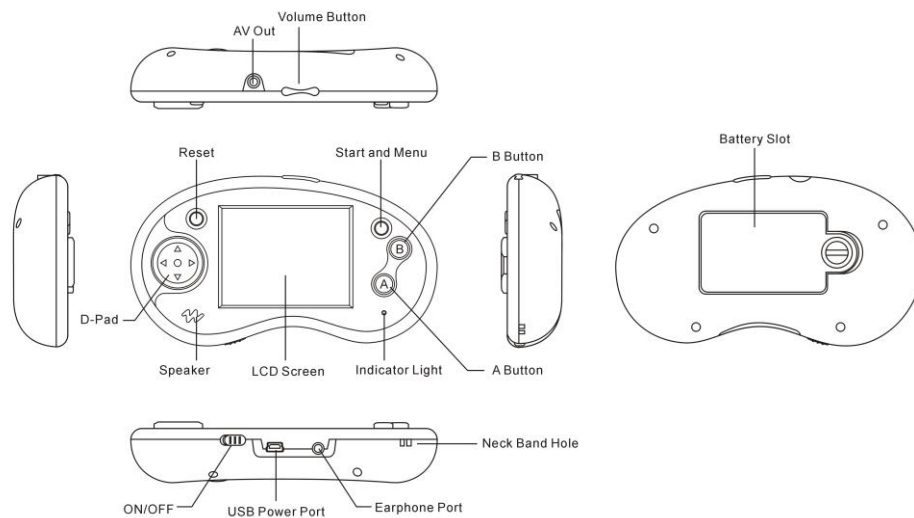

Following are brief descriptions of the buttons used to play the game. Details will be given later in the game introduction and operation instructions.

D-pad— — — — — Direction Key

A button— — — — — Confirm Key

B button— — — — — Special functional Key

AV out cable port— — — — — Connect with TV set via AV cable

Earphone port— — — — — Connect with the earphone

Volume Button— — — — — Adjust the Volume

1.2: Features:


- * 16bit Mobile Game Console with 120 fantastic Games built-in
- * 11 x high-resolution 3D Sport Games and 109 x Excited Arcade Games built-in
- * 2.77" LCD TFT screen with crystal clear sharp images
- * Resolution 960x240 pixels
- * Operated by 3x AAA-batteries
- * Operating system: Linux
- * Earphone jack built-in
- * TV output by AV cable (optional)
- * Age group 4+
- * Available in various colours
- * Product Dimension:137mm × 76mm × 27mm

1.3: Accessories:

- * Instruction Manual
- * 3pcs x AAA battery
- * Neck strap

1.4: Battery Installation

Please use a coin to open the battery cover on the back side of device, Insert three pieces of AAA batteries into it. When installing, pay attention to the “+” & “-” markings of the battery as of following.

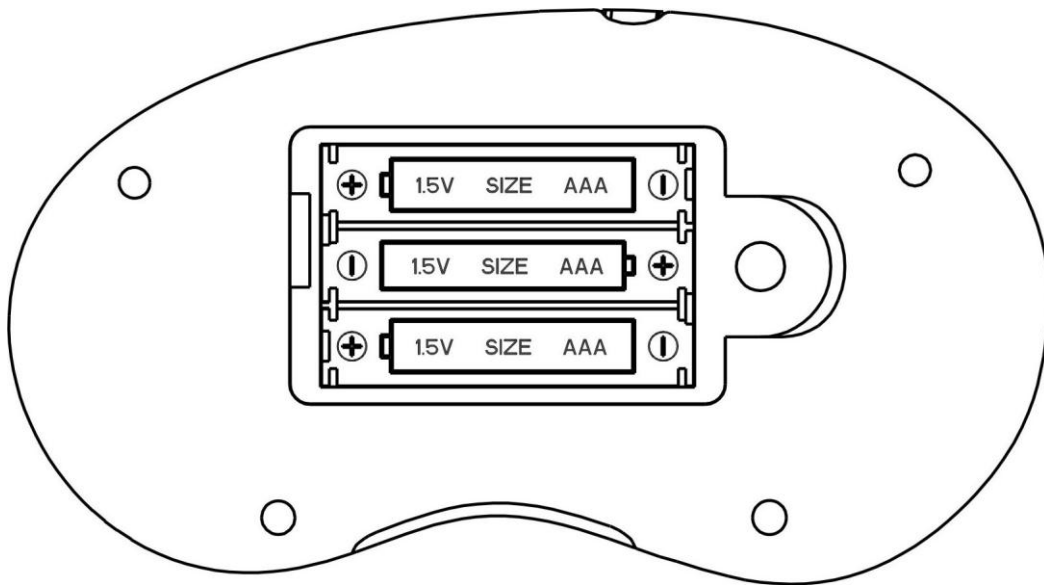

Caution:

1. Always follow the instructions carefully. Use only batteries specified and be sure to Insert them correctly by matching the “+” and “-” polarity markings
2. Do not mix old batteries and new batteries, or standard with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product has not being used for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause or be affected by local electrical interference, move away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

1.5 Game Operation Instruction:



TENNIS:

Left/Right: choose different side the ball will land

A key: Confirm/hit ball

B key: Return

START: Pause or exit game

RESET: Reset



BASEBALL:

Arrow keys: Select

A key : Confirm / offensive side, the move to the next base / defensive side, the ball

B key : return / offensive side, the return on the first baseman / defensive side, the pursuit runner handle: press A, is batting swing

START: Pause or exit game

RESET : reset



GOLF:

Arrow keys: Select the arrow keys around: A key to adjust the angle shots: Make sure / do action B ready to hit the button: return

A key: Hold down the A button to select a suitable power, quick release the A button, which is swing hit

START: Pause or exit game

RESET: reset



TABLE TENNIS:


Arrow keys: Select

A button: Confirm/batting swing

B button: Return

START: Pause or exit game

RESET: reset

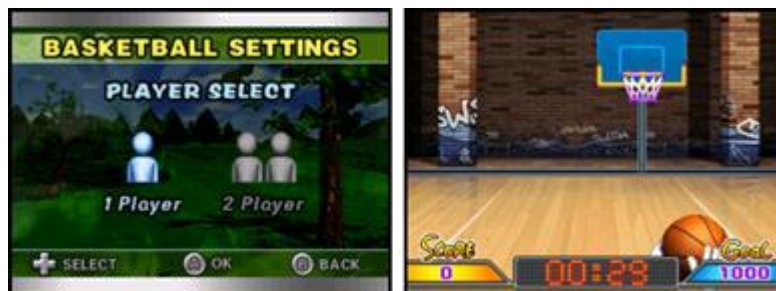

BASKETBALL:

Arrow keys: Select the arrow keys around: to adjust the location of pitch

A button: Confirm / do action shots of the preparation/pitching

B button: return

START: Pause or exit game

RESET: reset



BOWLING:

Arrow keys: Select the arrow keys around: to adjust the location of throw / angle

A button: Confirm / so throw the preparation of action B button: return

A key: Hold down the A button to select a suitable power, quick release the A button, that is,

START: Pause or exit game

RESET: reset



DARTS:

Arrow keys: Select

A button: Confirm the throwing darts regional / confirmation of throwing darts placement / recognition efforts

A key: press the A button to select a suitable power, quick release the A button, which darts

START: Pause or exit game

RESET button: reset



BOXING:

Direction keys: choose

A: Confirm

B: Return

LEFT + A: Left attack LEFT + B: Left Defense

Right + A: Right attack

Right + B: Right Defense

START: Pause or exit game



Curling:

Direction keys: Choose

A key: Confirm

B key: Rub the ICE



Ice Hockey:

Direction keys: choose

A key: Hit the ice ball



Trampoline:

UP: jump

Up+Right: swivel

A key: Confirm

B key: Confirm



MINIGAME-SHUDUKU:

Arrow keys: move the selection box

A button: Select the district to switch to digital / confirmation

B button: delete the current figure of lattice

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-MOVE BOX:

Arrow keys: move the protagonist / mobile box

A key: to return to the previous step

B key: re-play of the customs

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-100 FLOOR:

About arrow keys: move the protagonist

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-BENTHAL JEWEL:

Arrow keys: Move box

A button: switch box

B key: the use of help functions

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-SUPER MEMORY:

Arrow keys: move the selection box

A key: to confirm

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-LINKING PET:

Arrow keys: Mobile magic wand

A key: to confirm

B key: the use of computers to help

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-SUB WARFARE:

Around the arrow keys: move the submarine

A key: a bullet left

B key: a bullet to the right

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-COLOR STONE:

Arrow keys: move precious stones

A key: re-play

B key: MENU button to return to the previous step: suspend or withdraw from the game

RESET button: reset



MINIGAME-BLACKJACK:

Arrow keys: move the selection box

A key: to confirm

B key: the licensing

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-RALLY:

About arrow keys: about turning

A key: throttle b button: brake

MENU key: to suspend or withdraw from the game

RESET button: reset



MINIGAME-GT RACING:

Left/Right: direction key

A key: acceleration

B key: Brake

START: Pause or exit game

RESET: Reset



MINIGAME-PAIR MATCH:

Arrow keys: move the selection box

A key: to confirm

B key: the use of special function key

MENU: to suspend or withdraw from the game

RESET button: reset



MINIGAME-FREECELL:

Arrow keys: move the fingers
 A button: button to confirm
 B button: to view the license select
 MENU key: to suspend or withdraw from the game
 RESET button: reset



MINIGAME-MINE SWEEPING:

Arrow keys: move the selection box
 A button: button to confirm
 B button: marked by mines with ab key
 MENU key: to suspend or withdraw from the game
 RESET button: reset



MINIGAME-UP STAIRS:

About arrow keys: move the protagonist
 MENU key: to suspend or withdraw from the game
 RESET button: reset



MINIGAME-JUMPING MARY:

Arrow keys: move the protagonist
 MENU key: to suspend or withdraw from the game
 RESET button: reset



MINIGAME-GOBANG:

Arrow keys: move the selection box
 A key: to confirm
 B key: MENU button to return to the previous step: suspend or withdraw from the game
 RESET button: reset



MINIGAME-FIND FAULT:

Arrow keys: Select the cursor
 A key: to confirm
 B key: the use of special function key
 MENU: to suspend or withdraw from the game
 RESET button: reset



MINIGAME-Gather Eggs:

Arrow keys: move the protagonist



MINIGAME-Brick Blaster:

Arrow keys: Move the monolithic



MINIGAME-Elvish Boy:

Direction keys: Move

A key: Jump B key: Shooting

MENU: Pause or exit



MINIGAME-RobotWar:

Direction Keys: Move Tank

A key: Shooting



MINIGAME-30 Degree:

Left: Acceleration Right: Deceleration

A key: Little Jump

B key: Big Jump



MINIGAME-Change Cup:

Direction Keys: Move

A key: Confirm




MINIGAME-PaoPao:

Left: Deceleration

Right: Acceleration

A key: Jump

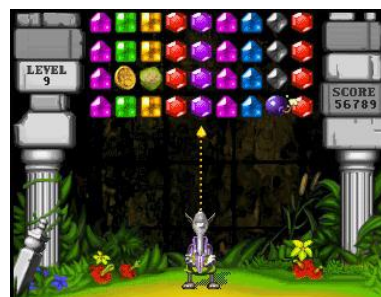

MINIGAME-Diamond Forest:

Left/Right: Move

A key: Suction B:Throw



MINIGAME-WestCowboy:

Left/Right: Move

A key: Shooting



MINIGAME-Big Shot Checker:

Direction keys:choose position

A key: confirm B:Cancel



MINIGAME-HappyNight:

A key: Fly/Drop



MINIGAME-Bumper balls:

Direction keys: Move

A key: Ready A release:bating



MINIGAME-Sea Fight :

Direction keys: choose direction

A key:Confirm

B key:shooting



MINIGAME-HighWay Racing:

Direction keys: Move

A key: Acceleration

B key: Shoot



MINIGAME-Track Racing:

Direction keys: Move

A key: Acceleration



MINIGAME-Pocket Change :

Direction keys: Move

A key: confirm

B key: clean coins



MINIGAME-Slot Machine:

Direction keys: Move

A key: confirm



MINIGAME-Brain Challenge:

Direction keys: Move

A key: confirm



MINIGAME-Mini Soccer:


Up/Down: Move



MINIGAME-Crossing

Direction keys: Move

A key: Jump

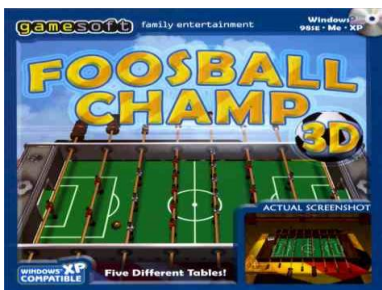

MINIGAME-Table Football:

Direction keys: choose/move

A key: confirm

B key: return



MINIGAME-Archery:

Direction keys: Move

A key: shoot



MINIGAME-Color Bead Loops:

Direction keys: Move

A key: confirm



MINIGAME-Beer Master:

Up/down: Move

A key: food

MENU: Pause or exit



MINIGAME-Homeward Journey

Direction keys: Move



MINIGAME-Bubble Destroyer

Direction keys: Move

A key:Throw



MINIGAME-Hare Fighter

Direction keys: Move

A key:Jump

B key:Attack



MINIGAME-Balloon Shooting

Direction keys: Move

A key:Shooting



MINIGAME-Parking Lot

Direction keys: Move


A key:confirm



MINIGAME-DOGS

Direction keys: Move

A key:confirm

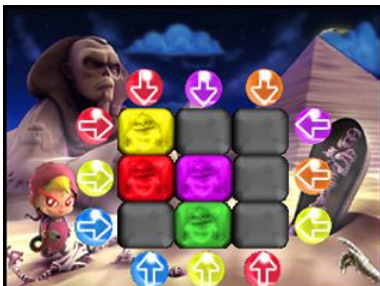

MINIGAME-Maze Combination

Direction keys: Move

A key:confirm



MINIGAME-PRECIPICE

Direction keys: Move

A key:confirm



MINIGAME-Monkeys

Direction keys: Move


A key: Shooting



MINIGAME-MINIBEE

Direction keys: Move

A key: Shooting

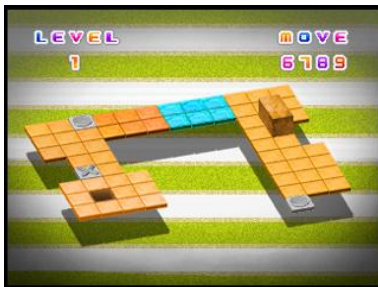

MINIGAME-Rolling Box

Direction keys: Move



MINIGAME-Cartoon Match

Direction keys: Move

A key: confirm



MINIGAME-Shape Switcher

Direction keys: Move

A key: Replay

MENU: Pause or exit



MINIGAME-CrazyPush

Direction keys: Move


A key: Use the tools

MENU: Pause or exit



MINIGAME-Maze of Doors

Direction keys: Move

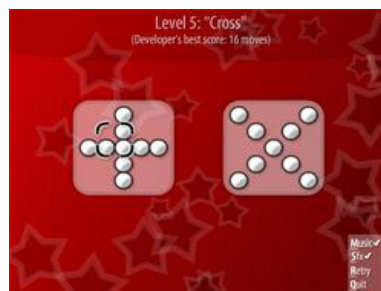

MINIGAME-Spin Match

Direction keys: Move


A key: Turn the little ball B key: Replay



MINIGAME-Climbing Exper

Direction keys: Move

MENU: Pause or exit

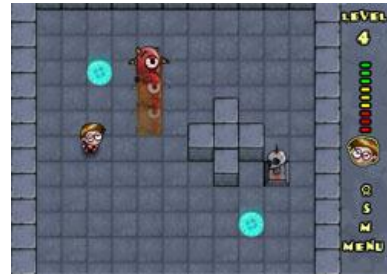

MINIGAME-Follow Me

Direction keys: Move



MINIGAME-OnFire

Direction keys: Move



MINIGAME-Jack Adventure

Left/Right: Move

UP: Jump

Down: Down

A key: Shooting



MINIGAME-PirateLanding

Direction keys: Move

UP/DOWN: Adjust angle

A key: confirm



MINIGAME-Herculean Guy

Direction keys: Move

A key: Push stone



MINIGAME-Forest Adventure

Direction keys: Move

A key: Jump

B key: Shooting

MENU: Pause or exit



MINIGAME-Magnet Boy

Direction keys: Move

A key: Jump



MINIGAME-Japanese Sumo

Left/Right: Move


A key: Attack

B key: Wrestling



MINIGAME-Paper Planes

Left/Right: Control direction

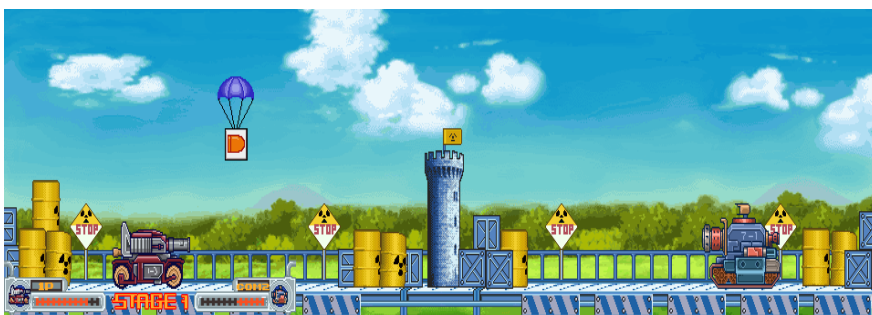

MINIGAME-Tanks PK War


Left/Right: Move

A key: Confirm



MINIGAME-PalaceGuardian

Direction keys: Move

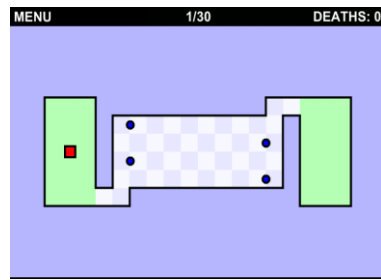

MINIGAME-Nimble stones

Direction keys: Move A:Replay



MINIGAME-Chess

Direction keys: Move

A key: Confirm

B key: Back



MINIGAME-Eat Bean

Direction keys: Move



MINIGAME-Spring Mice

Direction keys: Control the direction

A key: Jump



MINIGAME-Rope Skipping

A key: Jump



MINIGAME-Link Water Pipe

Direction keys: Move

A kev:Confirm

B kev:Replav



MINIGAME-Classic Tangram

Direction keys: Move

A kev:Confirm


B kev:Rotate



MINIGAME-Brain Age Test

Direction keys: Move selection

A key: Confirm B:Replay

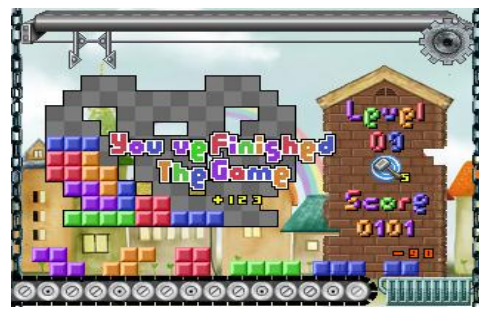

MINIGAME-Block Construction

Direction keys: Move

A key: Confrim



MINIGAME-Fruit Family

Direction keys: Move

A key: Confirm

B key: Use the tool



MINIGAME-Flag Match

Direction keys: Move

A key: Use the tool



MINIGAME-Pool Party

Left/Right: Move

A key: Jump



MINIGAME-Wonderful Pompon

Direction keys: Move

A key: Bomb



MINIGAME-Cafeteria

Direction keys: Move

A key: Confirm



MINIGAME-IQ Cow

Direction keys: Move

A key: Confirm

B key: START RUN



MINIGAME-Silversphere

Direction keys: Move




MINIGAME-Anti Gravity Robo

Direction keys: Move

A key: Jump


B key: Switch direction

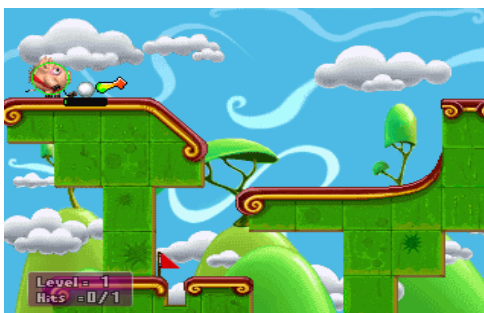

MINIGAME-Piggy Golf

Left/Right: Adjust angle

A key: Confirm

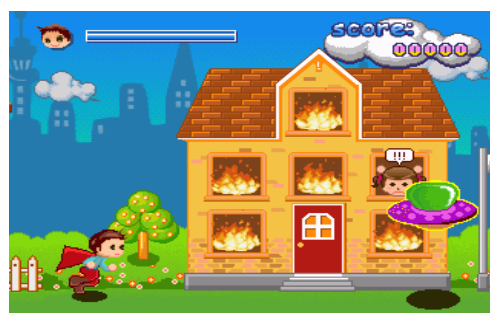

MINIGAME-Heroboy

Left/Right: Move

A key: Continue jump



MINIGAME- Bombman

Direction keys: Move

A key: Set bom



MINIGAME- Save The Fallen

Direction keys: Move

A key: Jump

B key: Shoot



MINIGAME- StarWar

Direction keys: Move

A key:Attack

B key:Defense



MINIGAME- Hell Marksman

Direction keys: Move

A key:shoot



MINIGAME- Water Rescue

Direction keys: Move



MINIGAME- Bomb Chain Unlimited

Direction keys: Move


A key: Set Bomb



MINIGAME- Suicide Squad

Direction keys: Move

A key: Set the direction of the arrow

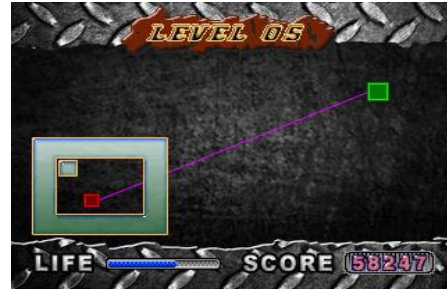

MINIGAME- Overmaze

Direction keys: Move



MINIGAME- Seven

Direction keys: Move

A key: fall



MINIGAME- Move Squares

Direction keys: Move

A key:confirm



MINIGAME- Four Boxes

Direction keys: Move



MINIGAME- Airborne Alien

Direction keys: Move



MINIGAME- Gliding Apple Girl

Right Direction key: speed up

Down direction key: fall



MINIGAME- Throw The Coins

Direction keys: Move


A key:confirm



MINIGAME- Horse Racing

Direction keys: Move


A key:speed up

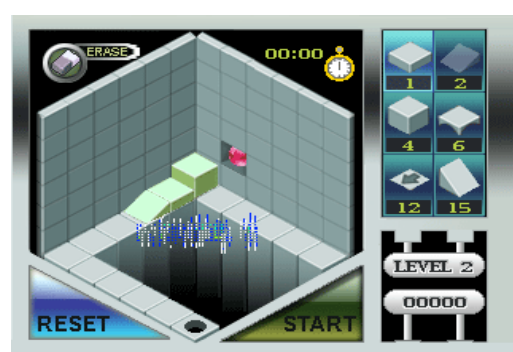

MINIGAME- Puzzle Ball


Direction keys: Move

A key:confirm

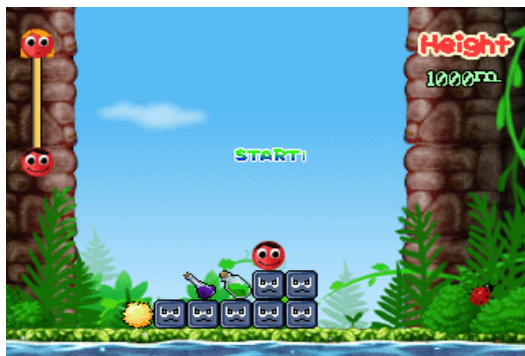

MINIGAME- Jumping Ball

Direction keys: Move

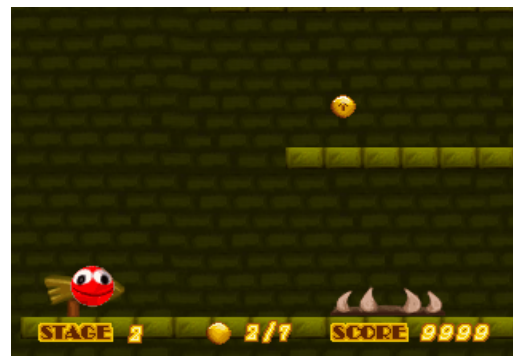

MINIGAME- Madball

Direction keys: Move



MINIGAME- Crazy Tank

Direction keys: Move

A key:shoot



MINIGAME- Glide Object

Direction keys: Move

www.capi.com



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)